



## POT WHEELS

### Installation Manual

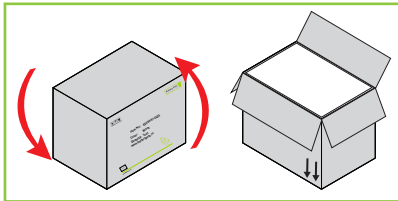

1. Make sure to have the accurate amount of wheels needed for your planter pot. Ask our sales Team for more information. Always order the needed drill with your Pot Wheels (ITEM 30-Drill83)!


2. Turn your product upside down, preferably still in the carton and open the bottom side of the carton.

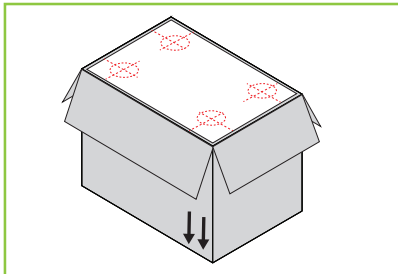

3. Measure out the centre position of the wheels you want to install, (see distance below). Placement of the wheels

For **jumbo planters** the wheel centre should be **11cm from the edge**. Item code: E1047, E1048, E1049, E1301, E1302, E1128, E1127, E1126, E1125, E1228, E1227, E1226, E1225.  
For **basic pottery** the wheel centre should be **6cm from the edge**. Item code: E1190, E1161, E1191, E1003-30, E1003-40, E1003-50, E1003-60, E1003-70, E1066, E1008-H50, E1016-60, E1016-80, E1016-100, E1195, E1216, E1360, E1361, E1362, E1363, E1367, E1368, E1369, E1370, E1371, E1372, E1373, E1374, E1375, E1376, E1377


4. Drill the holes gently with the drill. Let the drill do the work, be careful not to push the drill trough too fast; this might damage your planter or cause dangerous situations.

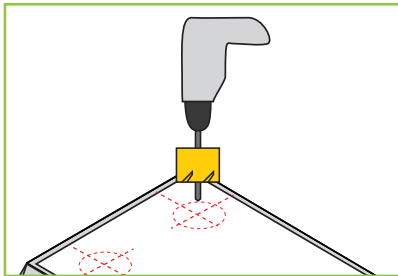

5. Use a vacuum cleaner to get rid of all the excess drilling dust.

6. Push the wheels in, if needed you can use a piece of wood and a hammer to get them in all the way by placing the wood on the rim of the wheel base.

7. Turn the planter including the carton around, open the top side of the carton and clean the rest of the excess drilling dust. Remove the packaging. Be careful not to scratch the outside of the planter pot!

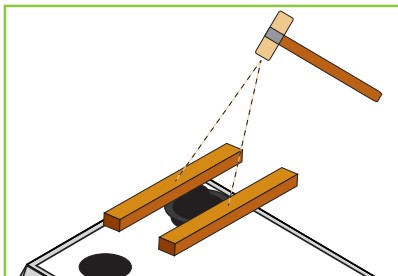


### SIDE NOTES

AFTER PLACING THE POT WHEELS, THE PLANTER IS NO LONGER WATER TIGHT. IT'S RECOMMENDED TO USE A LINING, IF NEEDED TOGETHER WITH THE DRAINAGE PIPE (ITEM 31-B) TO MAKE SURE THE WATER LEAVES THE PLANTER AT THE DESIRED AREA.

DON'T PUT MORE WEIGHT INTO THE PLANTER THAN RECOMMENDED BY OUR SALES TEAM AND SHOWN IN THE MAXIMUM WEIGHTS DIAGRAM. TOO MUCH WEIGHT WILL CAUSE THE WHEELS TO STOP WORKING OR BREAK OF COMPLETELY.

DON'T INSTALL LESS WHEELS THAN RECOMMENDED IN THE MAXIMUM WEIGHTS DIAGRAM.

IF YOU NEED TO FILL THE PLANTER WITH "EMPTY VOLUME" ITS RECOMMEND TO USE POLYSTYRENE FOAM ON THE WALLS AND BOTTOM OF THE PLANTER.

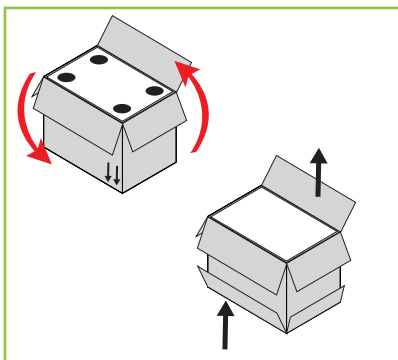


Please consider our technical advice – be it verbally, in writing or testing and supplied to the best of our knowledge – as information only and without responsibility in respect to other parties. It does not release you from your obligation to test the products supplied regarding their suitability for the intended application. Handling and utilization of our products by the customer exceed our responsibility and are at the customer's liability. We guarantee that our products conform to their specification and we will refund or replace only non-conforming products. Pottery Pots cannot be held responsible for any damages or accidents in connection with the use of our product.

# POT WHEELS


## JUMBO PLANTERS TEMPLATE

DRILL CENTRE 11CM FROM EDGE


E1047 - MAX TOTAL 97kg

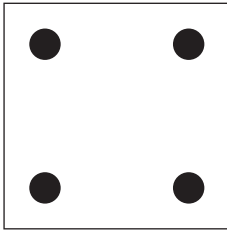


E1048 - MAX TOTAL 104kg

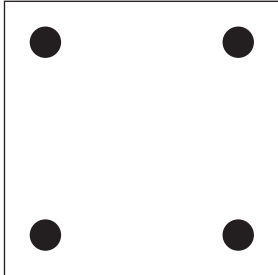


E1049 - MAX TOTAL 206kg

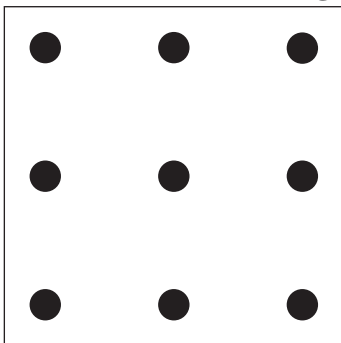


E1301 - MAX TOTAL 209kg

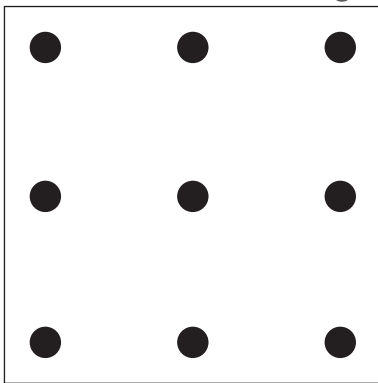


E1302 - MAX TOTAL 319kg

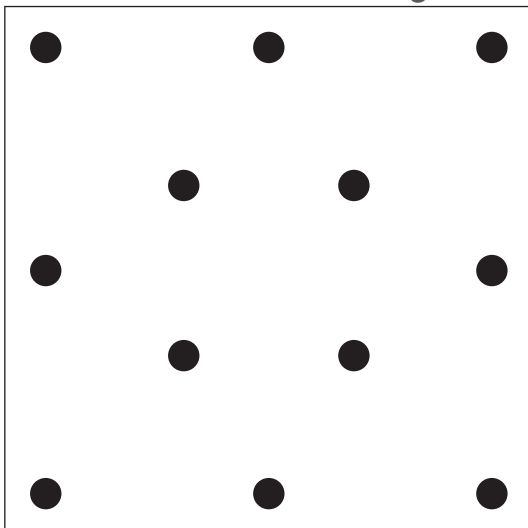


E1128, E1126 - MAX TOTAL 142-158kg

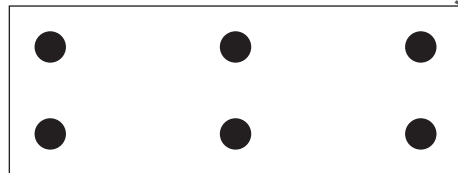


E1127, E1125 - MAX TOTAL 202-227kg

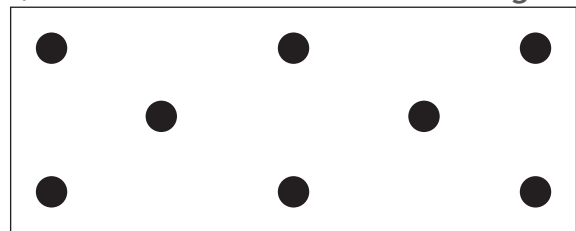

E1228, E1226 - MAX TOTAL 245-246kg

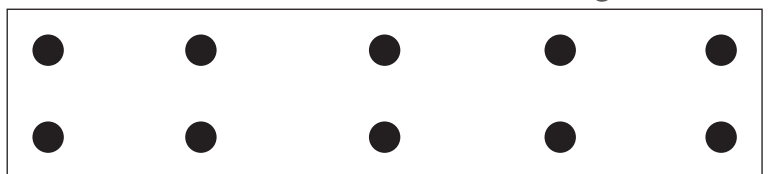

E1227, E1225 - MAX TOTAL 247-263kg

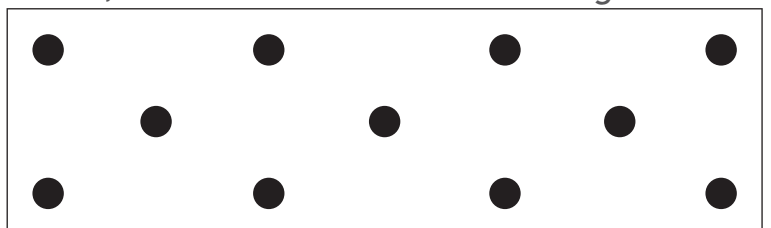


# POT WHEELS


## BASIC PLANTERS TEMPLATE

DRILL CENTRE 6 CM FROM EDGE


E1003-30 - MAX TOTAL 70kg

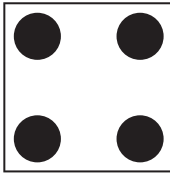


E1016-60 - MAX TOTAL 73kg

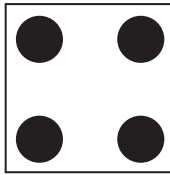


E1003-40 - MAX TOTAL 74kg

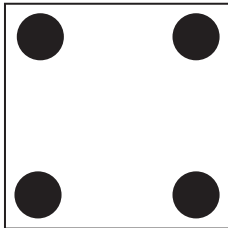


E1016-80 - MAX TOTAL 81kg

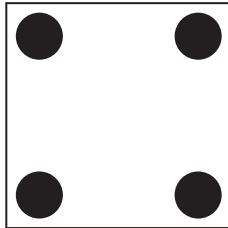


E1003-50 - MAX TOTAL 78kg

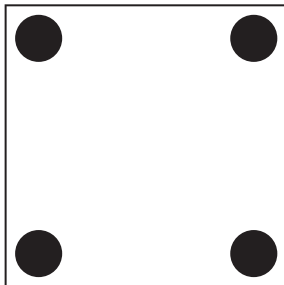


E1016-100 - MAX TOTAL 119kg

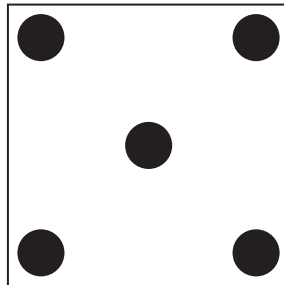


E1360 - MAX TOTAL 69kg

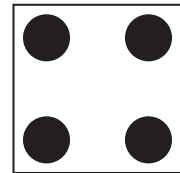


E1003-60 - MAX TOTAL 106kg

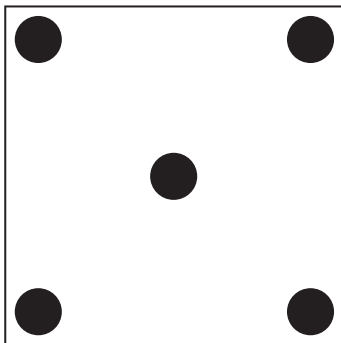


E1361 - MAX TOTAL 71kg

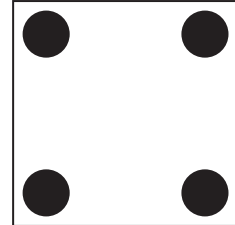


E1362 - MAX TOTAL 74kg

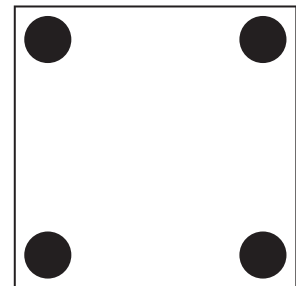

E1003-70 - MAX TOTAL 108kg

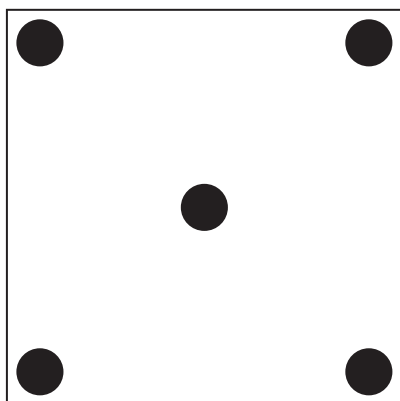

E1363 - MAX TOTAL 75kg

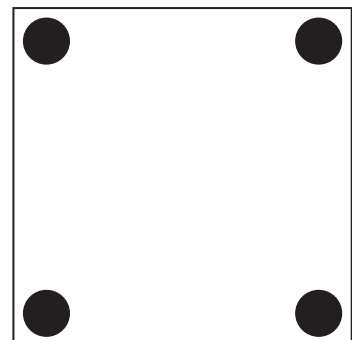


# POT WHEELS

## BASIC PLANTERS TEMPLATE

DRILL CENTRE 6 CM FROM EDGE

E1190 - MAX TOTAL 127kg

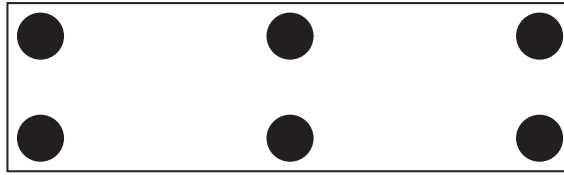

E1161 - MAX TOTAL 184kg




E1191 - MAX TOTAL 199kg




E1066 - MAX TOTAL 80kg




E1008-H50 - MAX TOTAL 109kg

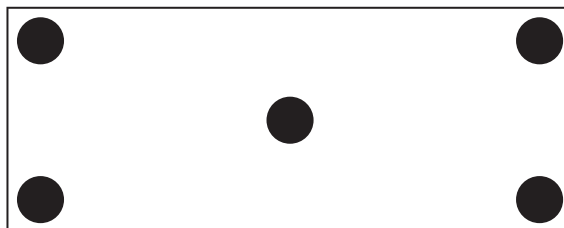

E1195 - MAX TOTAL 152kg

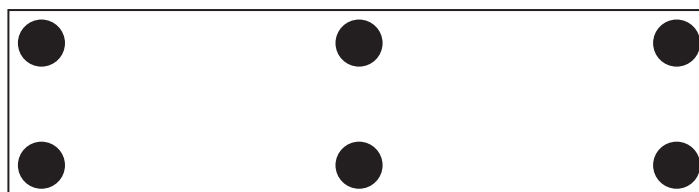

E1216 - MAX TOTAL 150kg

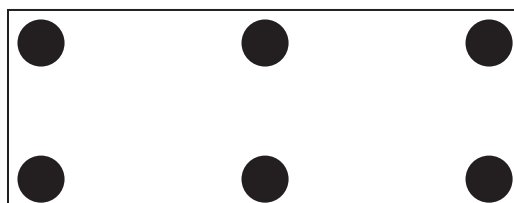

# POT WHEELS


## BASIC PLANTERS TEMPLATE

DRILL CENTRE 6 CM FROM EDGE


E1367 & E1374 - MAX TOTAL 69kg    E1371 - MAX TOTAL 147kg





E1368 & E1375 - MAX TOTAL 71kg

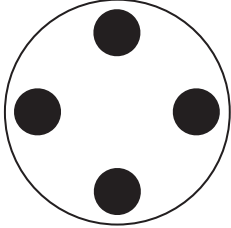


E1369 & E1376 - MAX TOTAL 71kg

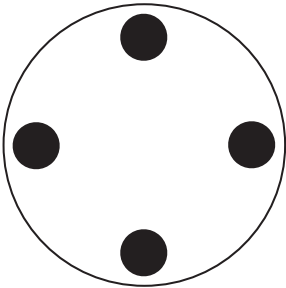

E1370 & E1377 - MAX TOTAL 72kg

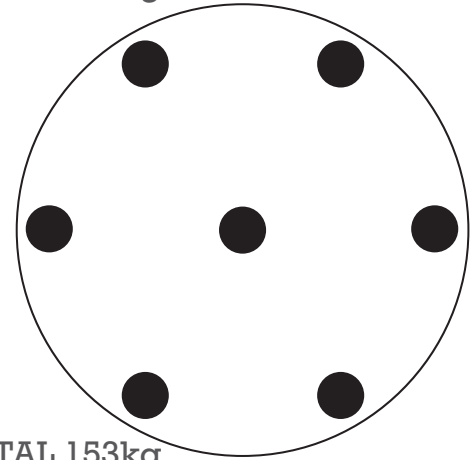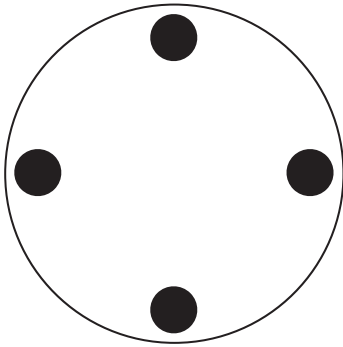

E1372 - MAX TOTAL 153kg

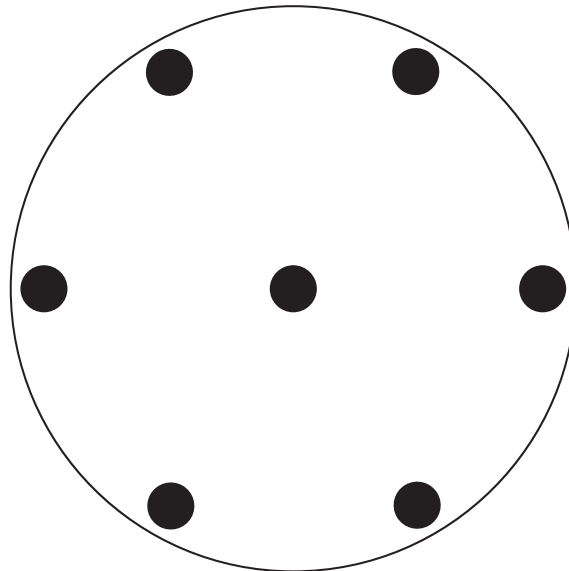

E1373 - MAX TOTAL 204kg

